


Smart Classroom (Touch Pad) Review

Step 1: Find the **control station** circled in red in the smart classroom

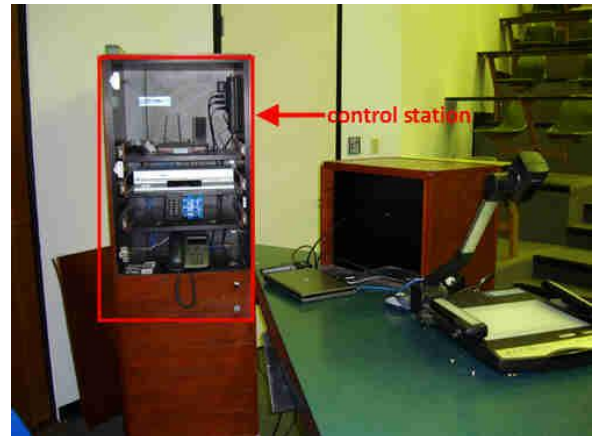

Step 2: Find the **touch pad** mounted on the control station






Step 3: You have 9 sources to select:

- **1** and **2** allows turning on and off the system (hold down **1** or **2** for 5 seconds)
- **3** allows DVD/VHS display
- **4** switches to the document camera for notes and transparencies
- **5** (laptop) projects from the podium laptop.
- **6** (**laptop 2**) projects from instructor (**your own**) laptop. But first you need to find the plug sitting on the desk and connect it with your own laptop.
- **7** controls the volume
- **8** controls the screen
- **9** mutes the sound



Troubleshooting Problems in Smart Classrooms

Problem	Solution	
<p>The monitor on the laptop displays the image but will not project the image onto the screen.</p>		<p>On the laptop keyboard, press Fn & F3 together for Gateway computers, Fn & F8 for Dell computers. You may have to press the keys more than once. The Fn key is in the lower-left part of the keyboard, and F keys are on the top row of the keyboard.</p>
<p>The projector will not turn on. The projector will not display an image from any source.</p>		<p>The projector did not have a chance to cool down before the system was turned on again. Turn the system off by pressing the off button circled in the image. When the flashing of the button is complete and give the projector a minute or two to cool down, and then press On button to start the system again.</p>
<p>Other problems and Questions</p>		<p>Call the Technical Support Center by picking up the phone under the touch pad; it will call automatically. The direct line is 351-4357.</p>

Do NOT remove this copy. If you want to download this copy, please go to <http://www.unco.edu/cetl/tutorials/smart.html>