


Using the 7.5 inch Touch Screen and Smart Classroom technology


1. If the Touch Screen is dark, touch anywhere on the screen to wake it.

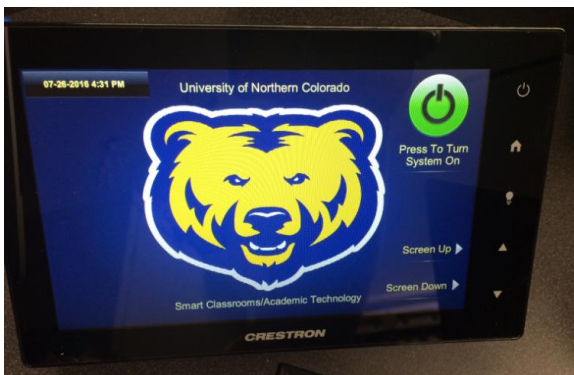

2. To turn on the projector system, touch the **green** power icon on the touch screen.




3. Once the projector system goes through a warm-up, you will see the following screen:

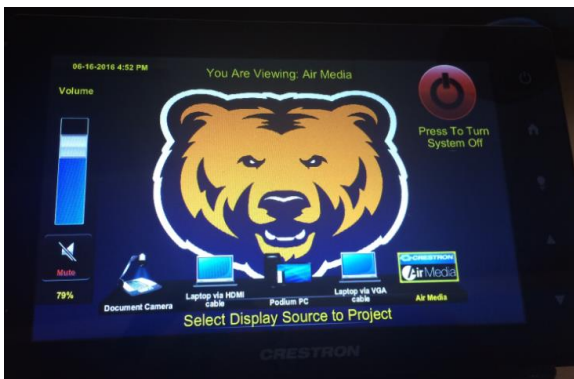

4. Touch the icon of the source you would like to display on the projector screen.



If nothing shows up after selecting a source:

- Set computer to “duplicate” by holding down the Windows key () and pressing the “P” key.
- Try selecting another source, then go back to your original source.

5. Use the volume slider to increase/decrease the audio, or press the “Mute” button to quickly decrease the volume. Press “Mute” again to quickly resume previous volume level.



When you are finished with class, please turn the Projector off by touching the **red** system off button. This will ensure proper operation for those who follow you.



If you need further assistance, please call the Technical Support Center at 351-HELP (4357).